


# 1578-LT-TH - 1-1/2" Impact Wrench

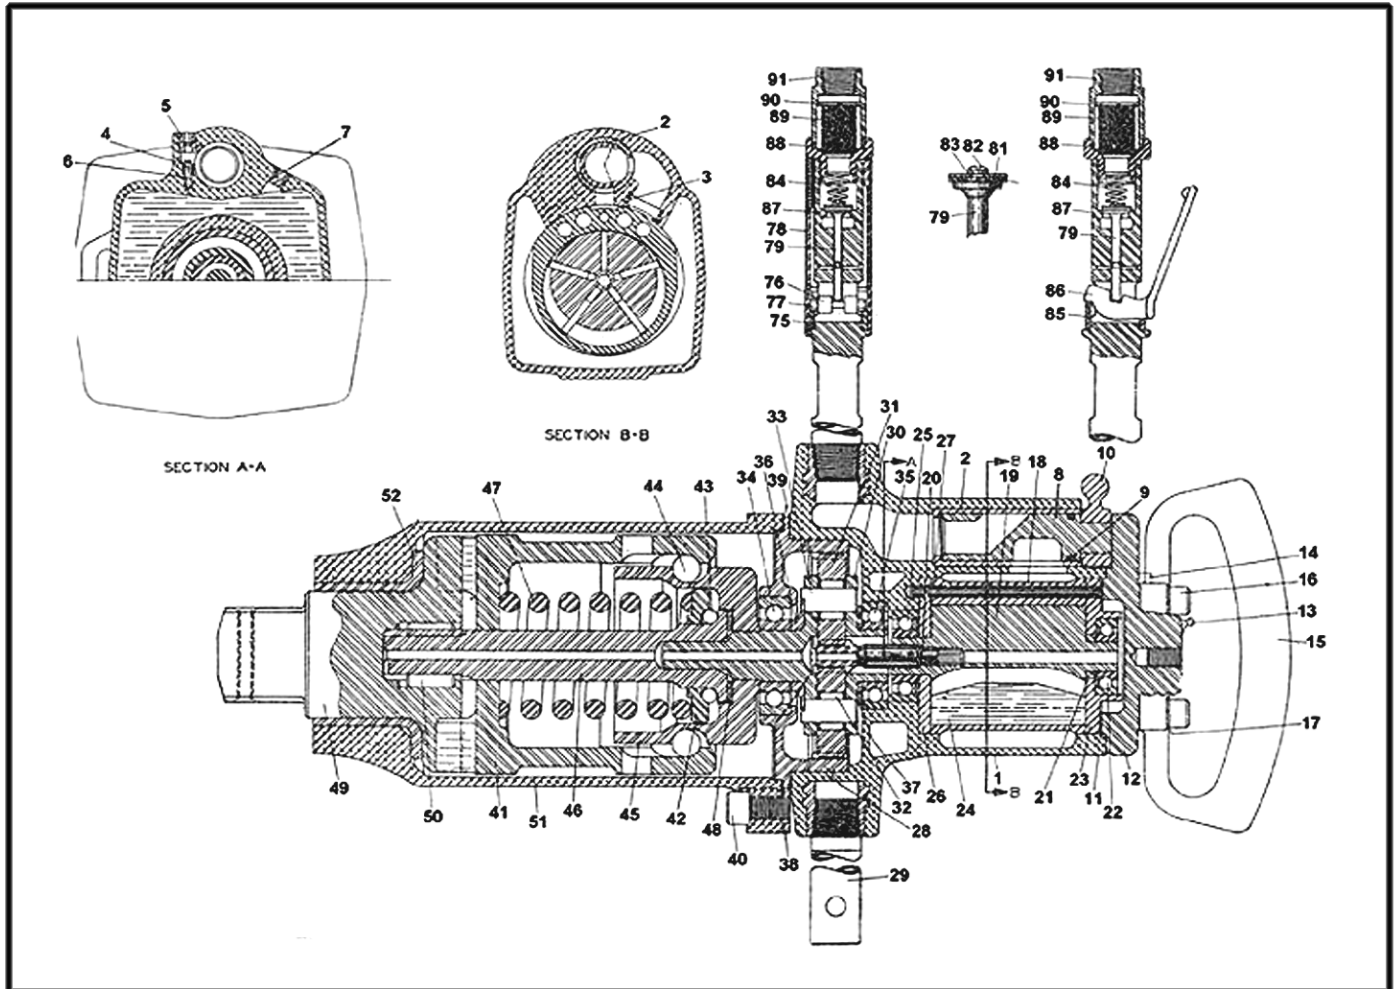

**Just Tools Inc.**

33a Haas Road, Toronto, On M9W 3A1

Tel: 416-748-0707 1-888-748-0707 Fax: 416-748-0706

E-mail: [sales@justools.com](mailto:sales@justools.com)

## 1578-LT-TH - 1-1/2" Impact Wrench

#	DESCRIPTION	#	DESCRIPTION
1	ILA582A1-A40 IR PARTS - MOTOR HOUSING ASSEMBLY	35	D10-518 IR PARTS - BALL BEARING
2	ILA582A1-330 IR PARTS - REVERSE VALVE BUSHING	36	ILA582A1-331 IR PARTS - GEAR FRAME FRONT SPACER
4	R2-71 IR PARTS - OILER ADJUSTING SCREW	37	577-332 IR PARTS - GEAR FRAME REAR SPACER
5	WF-109A IR PARTS - THROTTLE VALVE CAP	38	ILA578A1-720 IR PARTS - HOUSING COVER
6	R2-75 IR PARTS - OILER FELT	39	ILA582A1-239 IR PARTS - HOUSING COVER GASKET
7	ROH-377 IR PARTS - OIL CHAMBER PLUG	40	ILA582A1-638 IR PARTS - HAMMER CASE SCREW
8	ILA582A1-A329 IR PARTS - REVERSE VALVE	41	5820-724 IR PARTS - HAMMER
9	HU-730 IR PARTS - O RING	42	ILA582A1-695 IR PARTS - HAMMER SPRING THRUST BEARING
11	577-283 IR PARTS - END PLATE GASKET	43	D04-280 IR PARTS - CAM BALL
12	ILA582A1-A102 IR PARTS - BACKHEAD ASSEMBLY	44	577-714 IR PARTS - CAM BALL
13	23-188 IR PARTS - GREASE FITTING	45	5780-721 IR PARTS - BALL CAM
14	ILA582A1-68 IR PARTS - BACKHEAD CAP SCREW	46	ILA582A1-725 IR PARTS - ARBOR
15	ILA582A1-1 IR PARTS - GRIP HANDLE	47	ILA582A1-728 IR PARTS - HAMMER SPRING
16	ILA582A1-68 IR PARTS - BACKHEAD CAP SCREW	48	ILA582A1-729 IR PARTS - FRICTION DRIVE WASHER
17	HRA20A-322 IR PARTS - LOCK WASHER	49	ILA582A1-726 IR PARTS - ANVIL
18	588-3 IR PARTS - CYLINDER	50	HU-527 IR PARTS - ANVIL DRIVER PIN
19	577-53 IR PARTS - ROTOR	52	ILA582A1-641 IR PARTS - HAMMER CASE BUSHING
20	577-17 IR PARTS - ROTOR PINION	79	R4H-402 IR PARTS - THROTTLE VALVE
21	R5H-65 IR PARTS - ROTOR SPACER	84	T01-308 IR PARTS - SPRING
22	R5H-22 IR PARTS - BALL BEARING	85	R4H-270 IR PARTS - THROTTLE LEVER SPACER
23	577-12A IR PARTS - REAR END PLATE	86	R4H-273 IR PARTS - THROTTLE LEVER
24	R5H-42-5 IR PARTS - VANE PACKET	87	R4H-401 IR PARTS - THROTTLE BODY
25	R5H-24 IR PARTS - BALL BEARING	88	R4H-566 IR PARTS - AIR STRAINER CAP
26	R55H-11 IR PARTS - FRONT END PLATE	89	R5H-61 IR PARTS - AIR STRAINER SCREEN
27	205-1098 IR PARTS - CYLINDER DOWEL	90	R3H-567 IR PARTS - AIR STRAINER SCREEN SUPPORT
28	ILA582A1-406 IR PARTS - INTERNAL GEAR	91	R5H-565 IR PARTS - AIR STRAINER BODY
29	ILA578A1-48 IR PARTS - ASSIST HANDLE	NI	R5H-A565 IR PARTS - AIR STRAINER ASSEMBLY
30	ILA582A1-8 IR PARTS - PLANET GEAR FRAME	NI	ILA578A1-A724 IR PARTS - HAMMER ASSEMBLY
31	ILA582A1-10 IR PARTS - PLANET GEAR	NI	ILA582A1-58 IR PARTS - LOCK WASHER
33	577-191 IR PARTS - PLANET GEAR SHAFT	NI	577-AL401 IR PARTS - LEVER THROTTLE COM.
34	215-63 IR PARTS - BALL BEARING	NI	BU-778 IR PARTS - BACKHEAD CAP SCREW
		NI	241SR-227 IR PARTS - OIL CHAMBER PLUG