


612 BELT SANDER – 13 MM

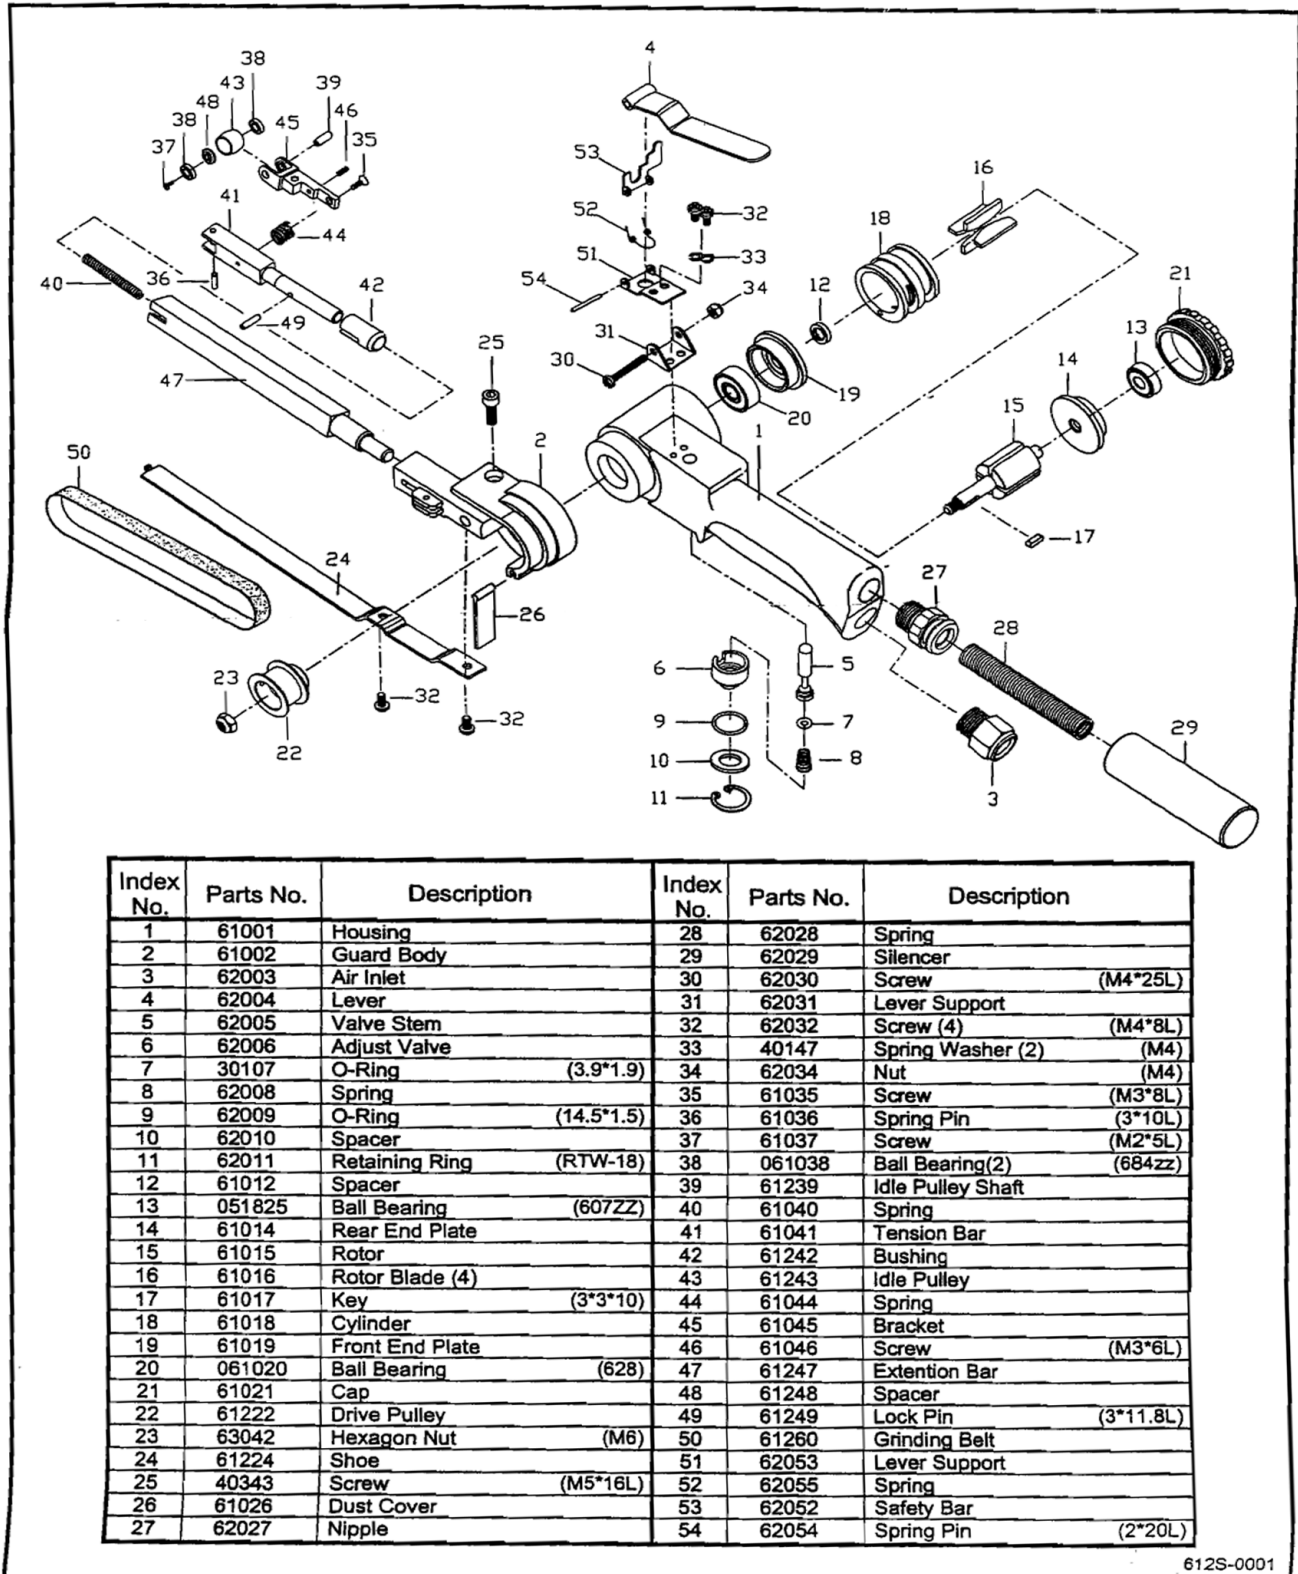

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	61001	Housing	28	62028	Spring
2	61002	Guard Body	29	62029	Silencer
3	62003	Air Inlet	30	62030	Screw (M4*25L)
4	62004	Lever	31	62031	Lever Support
5	62005	Valve Stem	32	62032	Screw (4) (M4*8L)
6	62006	Adjust Valve	33	40147	Spring Washer (2) (M4)
7	30107	O-Ring (3.9*1.9)	34	62034	Nut (M4)
8	62008	Spring	35	61035	Screw (M3*8L)
9	62009	O-Ring (14.5*1.5)	36	61036	Spring Pin (3*10L)
10	62010	Spacer	37	61037	Screw (M2*5L)
11	62011	Retaining Ring (RTW-18)	38	061038	Ball Bearing(2) (684zz)
12	61012	Spacer	39	61239	Idle Pulley Shaft
13	051825	Ball Bearing (607ZZ)	40	61040	Spring
14	61014	Rear End Plate	41	61041	Tension Bar
15	61015	Rotor	42	61242	Bushing
16	61016	Rotor Blade (4)	43	61243	Idle Pulley
17	61017	Key (3*3*10)	44	61044	Spring
18	61018	Cylinder	45	61045	Bracket
19	61019	Front End Plate	46	61046	Screw (M3*6L)
20	061020	Ball Bearing (628)	47	61247	Extension Bar
21	61021	Cap	48	61248	Spacer
22	61222	Drive Pulley	49	61249	Lock Pin (3*11.8L)
23	63042	Hexagon Nut (M6)	50	61260	Grinding Belt
24	61224	Shoe	51	62053	Lever Support
25	40343	Screw (M5*16L)	52	62055	Spring
26	61026	Dust Cover	53	62052	Safety Bar
27	62027	Nipple	54	62054	Spring Pin (2*20L)

612S-0001