


# AirPro JUST TOOLS INC. AirPro

## 620 MINI-BELTSANDER

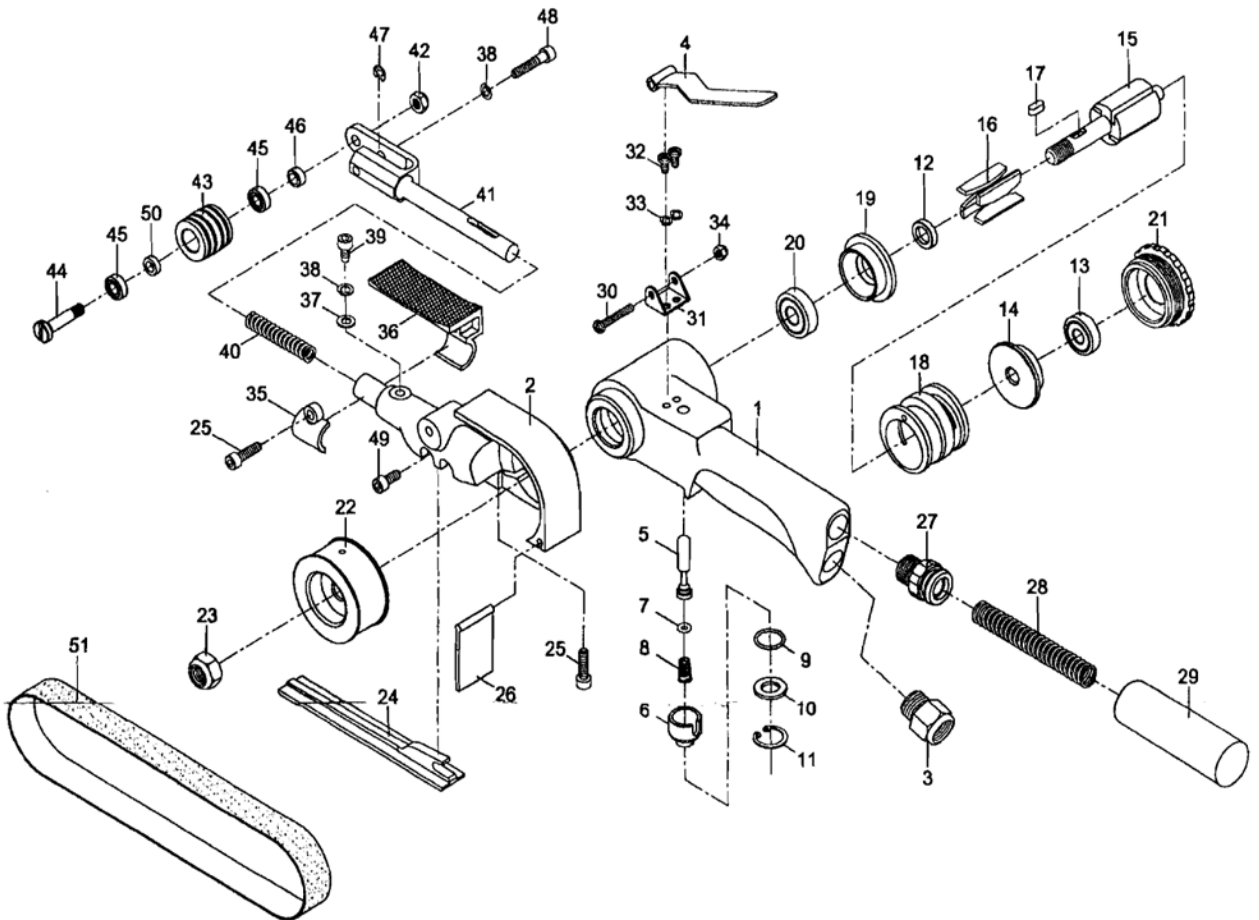

33a Haas Road, Toronto, On M9W 3A1 Tel: 416-748-0707 Fax: 416-748-0706 1-888-748-0707 E-mail: sales@justools.com

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	62001	Housing	27	62027	Nipple
2	62002	Guard Body	28	62028	Spring
3	62003	Air Inlet	29	62029	Silencer
4	62004	Lever	30	62030	Screw (M4*25L)
5	62005	Valve Stem	31	62031	Lever Support
6	62006	Adjust Valve	32	62032	Screw (2) (M4*8L)
7	30107	O-Ring (Ø3.9*Ø1.9)	33	40147	Spring Washer (2) (M4)
8	62008	Spring	34	62034	Nut (M4)
9	62009	O-Ring (Ø14.5*Ø1.5)	35	62035	Bushing
10	62010	Spacer	36	62036	Finger Pad
11	62011	Retaining Ring (RTW-18)	37	62037	Washer (M5)
12	62012	Distance Collar	38	40344	Spring Washer (M5)
13	030120	Ball Bearing (608ZZ)	39	62039	Screw
14	62014	Rear End Plate	40	62040	Spring
15	62015	Rotor	41	62041	Arm
16	62016	Rotor Blade (4)	42	63042	Nut (M6)
17	62017	Key (4*4*10)	43	62043	Idle Pulley
18	62018	Cylinder	44	62044	Shaft
19	62019	Front End Plate	45	062045	Ball Bearing (2) (686ZZ)
20	051220	Ball Bearing (6000ZZ)	46	62046	Spacer
21	62021	Cap	47	62047	Retaining Ring (ETWJ-4)
22	62022	Drive Pulley	48	62048	Bolt
23	62023	Nut (M10)	49	62049	Bolt (M5*12L)
24	62024	Flat Shoe	50	62050	Spacer
25	62025	Bolt (2) (M5*18L)	51	62060	Grinding Belt
26	62026	Dust Cover			