


MODEL BRH-7 BRH-3

Exploded View

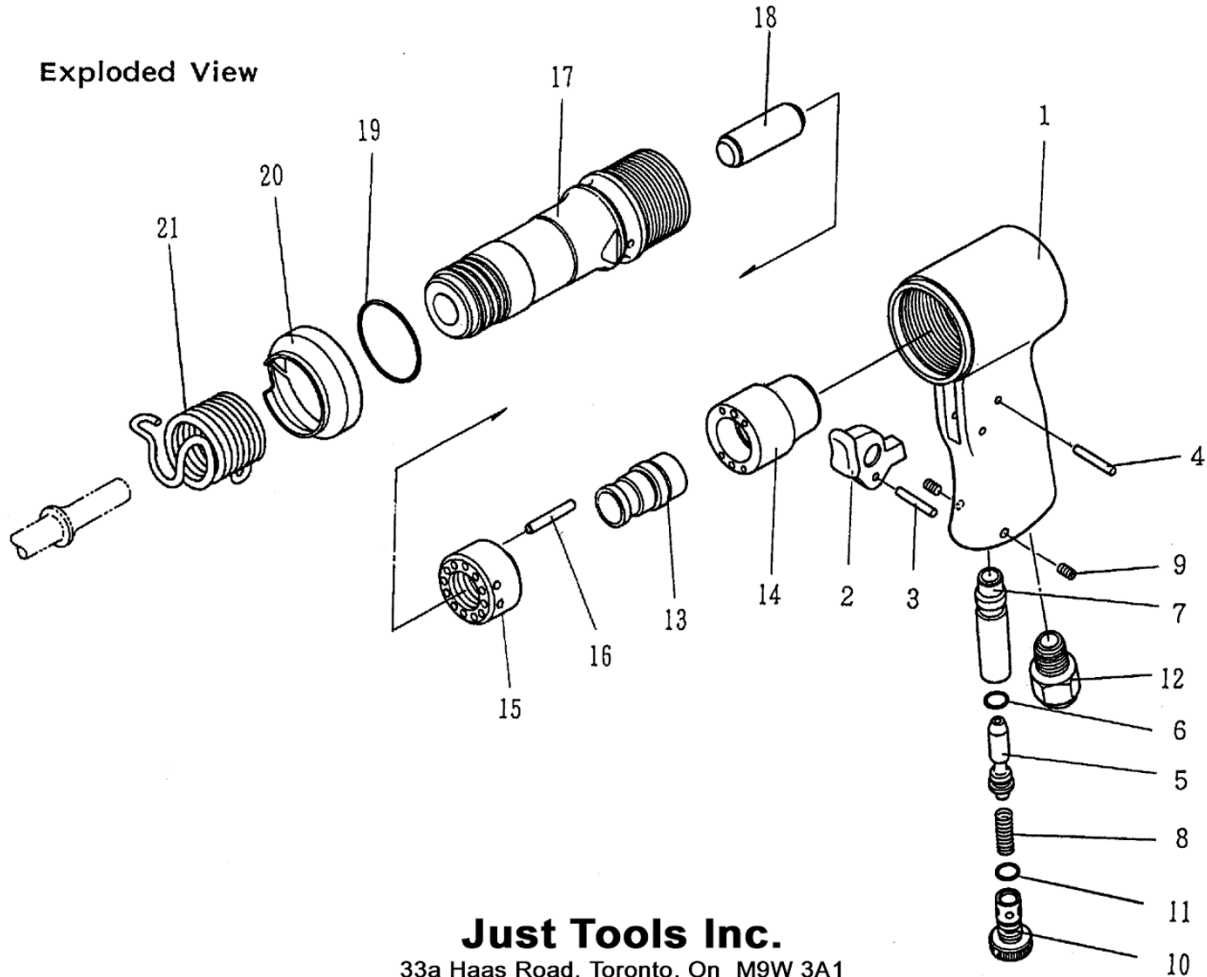

Just Tools Inc.

33a Haas Road, Toronto, On M9W 3A1
Tel: 416-748-0707 Fax: 416-748-0706

1-888-748-0707 E-Mail:sales@justools.com

Parts List

Symbol No.	Parts No. For BRH-7 For BRH-3	Q'ty Req.	Description	Symbol No.	Parts No. For BRH-7 For BRH-3	Q'ty Req.	Description
1 1A	Y50205010 Y50201010 Y5020501B Y5020101B	1 (1)	Handle Handle CP(Incl.No.7)	12	Y50201170 ***	1	Screw Bushing PT
2	Y50201020 ***	1	Trigger	13	Y50205120 Y50201180	1	Valve
3	Y50201030 ***	1	Trigger Pin (3×22)	14	Y50205130 Y50201190	1	Valve Box
4	Y50201040 ***	1	Trigger Pin (3×16)	15	Y50205140 Y50201200	1	Valve Seat
5	Y50201050 ***	1	Throttle Valve	16	Y50205150 Y50201210	1	Valve Knock
6	Y50201060 ***	1	O-Ring (S-6 HS-90)	17	Y50205160 Y50201220	1	Cylinder
7	Y50201070 ***	1	Throttle Valve Bush	18	Y50205200 Y50201230	1	Piston
8	Y50201080 ***	1	Throttle Valve Spring	19	Y50205170 Y50201250	1	O-Ring
9	Y50201130 ***	1	Set Screw (5×8)	20	Y50205180 Y50201260	1	Exhaust Deflector
10	Y50201280 ***	1	Control Valve	21	Y50205190 Y50201270	1	Spring Retainer
11	Y50201290 ***	1	O-Ring (S-8)				

Note : Part No. as marked *** for BRH - 3 is common to that for BRH - 7.